

AZERA CUSTOMER DELIVERY CHECK LIST (continued)

❑ TIRE PRESSURE MONITORING SYSTEM (TPMS) – page 27

 
Explain TPMS function to customer.

- When illuminated, one or more tires are under-inflated.
- Blinks for approximately one minute then remains illuminated when there is a malfunction with the TPMS.



❑ CLOCK ADJUSTMENT – page 25

1. Press and hold CLOCK **A**.
2. Touch ▲ or ▼ to set the clock.
3. Touch “Done” when finished.

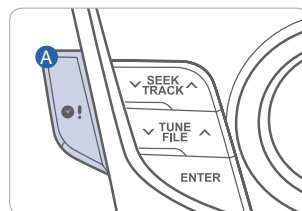

❑ VEHICLE SETTINGS – pages 12-13

- Demonstrate vehicle settings in instrument cluster
- Demonstrate navigation use, enter dealer address
- Show radio presets

❑ BLUETOOTH – pages 18-20

- Demonstrate phone pairing
- Refer to www.hyundaiusa.com/bluetooth
- Demonstrate QR code



❑ BLUE LINK – pages 21-22

- Show website: www.hyundaiusa.com/technology/bluelink
- Demonstrate Point of Interest (POI) search and download

Sales Consultant	Date	Sales Manager	Date
Customer		@	Date
Email			

MAINTENANCE

Scheduled Maintenance	Normal Usage		Severe Usage*	
Engine Oil And Filter	Replace	7,500 or 12 mos.	Replace	3,750 or 6 mos.
Fuel Additives	Add	7,500 or 12 mos.		
Tire Rotation	Perform	7,500	Perform	7,500
Air Cleaner Filter	Inspect Replace	7,500 30,000	Inspect Replace	Same As Normal More Frequently
Battery Condition	Inspect	7,500	Inspect	Same As Normal
Vacuum Hose	Inspect	7,500	Inspect	Same As Normal
Climate Control Air Filter (For Evaporator And Blower Unit)	Replace	15,000	Replace	More Frequently
Air Conditioning Refrigerant	Inspect	15,000	Inspect	Same As Normal
Brake Hoses & Lines	Inspect	15,000	Inspect	Same As Normal
Drive Shafts & Boots	Inspect	15,000	Inspect	7,500 or 6 mos.
Exhaust Pipe & Muffler	Inspect	15,000	Inspect	Same As Normal
Front Disc Brake/Pads	Inspect	15,000	Inspect	More Frequently
Rear Brake Disc/Pads	Inspect	15,000	Inspect	More Frequently
Steering Gear Box, Linkage & Boots/ Lower Arm Ball Joint, Upper Arm Ball Joint	Inspect	15,000	Inspect	More Frequently
Suspension Mounting Bolts	Inspect	15,000	Inspect	Same As Normal
Brake Fluid	Inspect	30,000	Inspect	Same As Normal
Fuel Filter	Inspect	30,000	Inspect	Same As Normal
Fuel Lines, Fuel Hoses and Connections	Inspect	30,000	Inspect	Same As Normal
Fuel Tank Air Filter	Inspect	30,000	Inspect	Same As Normal
Parking Brake	Inspect	30,000	Inspect	More Frequently
Vapor Hose & Fuel Filler Cap	Inspect	30,000	Inspect	Same As Normal
Valve Clearance	Inspect	60,000	Inspect	Same As Normal
Drive Belt (Alt, A/C)	1st Inspect 60,000 or 72 mos. Add. Inspect 15,000 or 24 mos.		Inspect	Same As Normal
Spark Plugs (Iridium Coated)	Replace	105,000 or 10 yrs.	Replace	More Frequently
Coolant	1st Replace 120,000 or 10 yrs. Add Replace 30,000 or 24 mos.		Replace	Same As Normal
Automatic Transaxle Fluid	No check, No service required		Replace	60,000

*See Owner's Manual for details.

Looking for more detailed information? This Quick Reference Guide does not replace your vehicle's Owner's Manual. If you require additional information or are unsure of a specific issue, you should always refer to the vehicle's Owner's Manual or contact your authorized Hyundai dealer.

The information contained in this Quick Reference Guide was correct at the time of printing, however, specifications and equipment can change without notice. No warranty or guarantee is being extended in this Quick Reference Guide, and Hyundai reserves the right to change product specifications and equipment at any time without incurring obligations. Some vehicles are shown with optional equipment. Specifications apply to U.S. vehicles only. Please contact your Hyundai dealer for current vehicle specifications.

NP150-M2012
(Rev 10/22/12)
Printing 10/24/12

HYUNDAI

AZERA

Quick Reference Guide



www.hyundai.com

 **HYUNDAI**
NEW THINKING.
NEW POSSIBILITIES.

Roadside Assistance: **1-800-243-7766**
Consumer Affairs: **1-800-633-5151**
XM® Radio: **1-800-967-2346**
Blue Link: **1-855-2BLUELINK**
(1-855-225-8354)

Table of contents

GETTING STARTED

Engine start/stop button	03
Front seat adjustment	04
Fuel door	05
Headrest adjustment	04
Rear seat folding	05
Remote keyless entry	02
Seat belt adjustments	05
Trunk opening	03

FEATURES AND CONTROLS

Active ECO System	28
Central door lock switch	07
Child-protector rear door lock	29
Climate control	14-15
Clock adjustment	25
Cruise control system	16
Driver's main controls	07
Electronic Stability Control (ESC)	28
Head lights and fog lights	08
Homelink wireless control system	11
Instrument cluster	12-13
Instrument panel illumination	13
Interior lights	11
Outside rearview mirrors	08
Rearview camera	29
Steering wheel adjustments	06
Steering wheel controls	16-17
Sunroof	10
Tire Pressure Monitoring System (TPMS)	27
Transmission	26
Trip computer	13
Wiper and washer	09

MULTIMEDIA

AUX, USB, and iPod® Port	25
Blue Link Telematics system	21-22
Bluetooth phone operation tips	18-19
Bluetooth phone pairing	20
Navigation	24
Touchscreen audio	23
Voice recognition tips	19

How to:

1. Pair phone to your vehicle. Refer to page 20.
2. Get started with Blue Link. Refer to page 21.

Steering
Wheel
Adjustments
Page 06

Instrument
cluster
Pages 12-13

Cruise control
system
Page 16

Wiper and
washer
Page 09

Audio

Navigation

Audio/
Navigation
Pages 23/24

Head lights
and fog lights
Page 08

Trip
computer
Page 13

Engine start/
stop button
Page 03

Automatic
transmission
Page 26

Climate
control
Pages 14-15

* Some vehicles may not be equipped with all the listed features.

Use this Quick Reference Guide to learn about the features that will enhance your enjoyment of your Hyundai. More detailed information about these features are available in your Owner's Manual.



 
WARNING!

To reduce the risk of serious injury to yourself and others, read and understand the important SAFETY INFORMATION in your Owner's Manual.




GETTING STARTED

REMOTE KEYLESS ENTRY

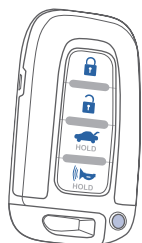

- Lock
- Unlock
- Trunk open
- Alarm

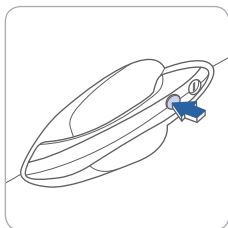 


Driver's door Lock / Unlock
Smart key must be within range.

Press:

- Once – Unlock driver door
- Twice – Unlock all doors
- Third – Lock all doors

 NOTE: You can activate or deactivate the Two Turn Unlock features in the vehicle. Refer to "LCD display" in the Owner's Manual section 4.

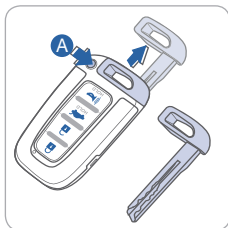



Remove mechanical key

Press and hold the release **A** button and remove the key.

Reinstall mechanical key

Put the key into the key slot and push it until a click sound is heard.

  ENGINE START/STOP BUTTON

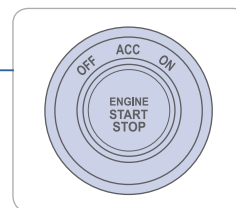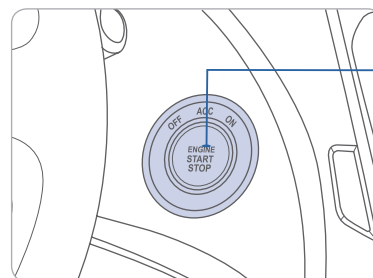

With the ignition OFF, press the engine start/stop button:

- Once for ACC (Accessory) mode.
- Twice for ON mode.
- Three times for OFF.

To start the engine, press the start/stop button while:

- Depressing the brake pedal.

To shut engine OFF, shift to:

- P (Park) and press the engine start/stop button.

Emergency situations

 
 
• Shut off engine while driving:

Press engine start/stop button for more than 2 seconds or press it 3 times consecutively within 3 seconds.


• Restart engine while driving:

Press engine start/stop button with shift lever in N (Neutral).

TRUNK OPENING

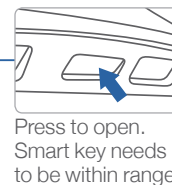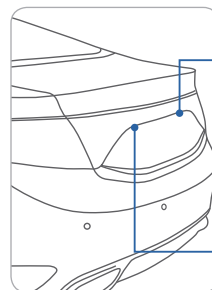

 
Press to open.
Smart key needs to be within range.



Insert key and turn.



 Press and hold to open.




Press the release button in the vehicle.




GETTING STARTED

 
FRONT SEAT ADJUSTMENT

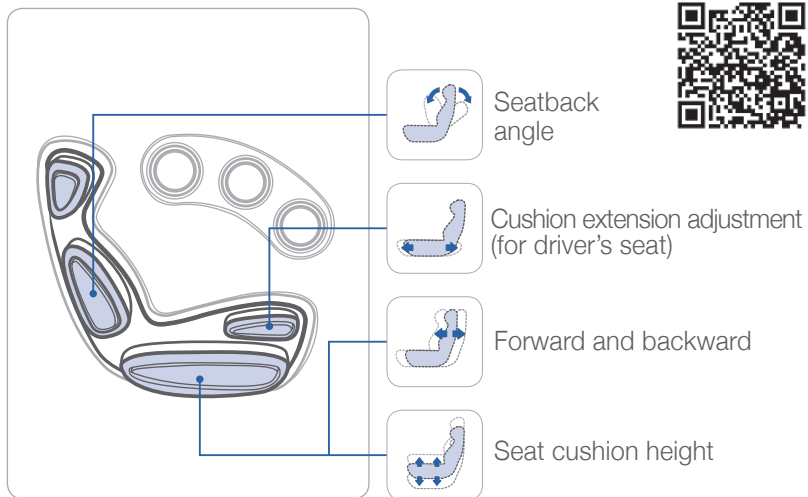


HEADREST ADJUSTMENT

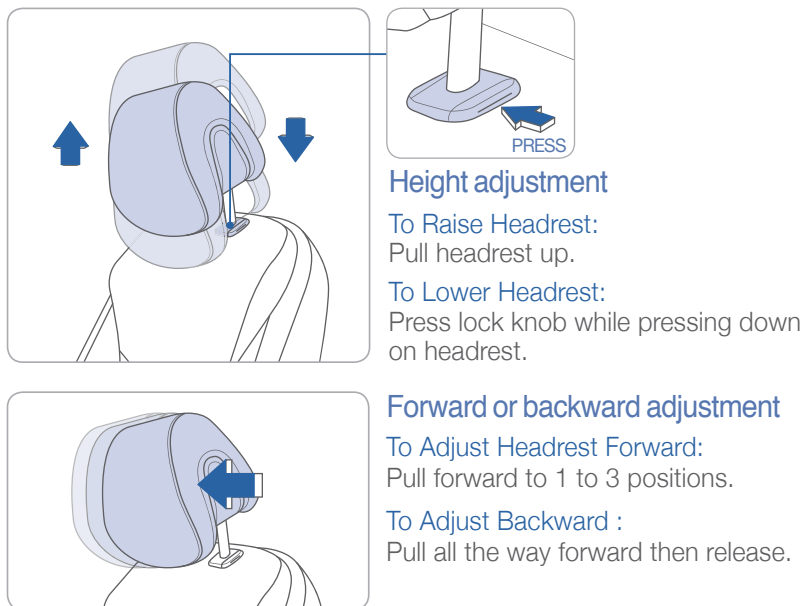 


SEAT BELT ADJUSTMENT (Front seat)

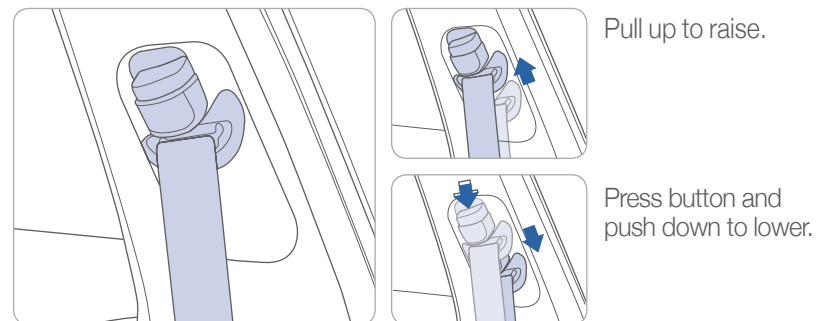 

FUEL DOOR


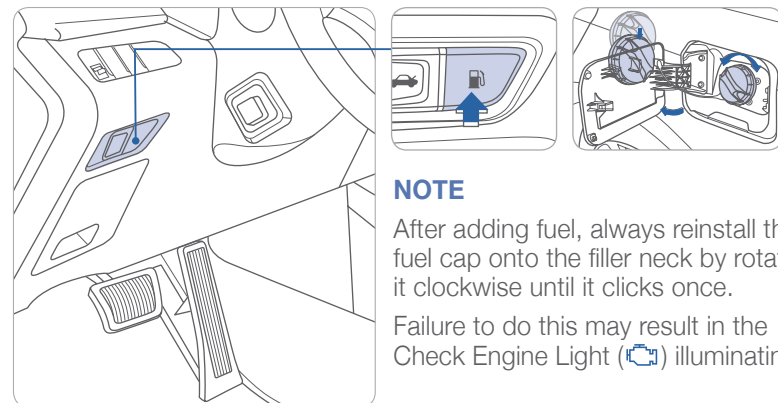 


REAR SEAT FOLDING

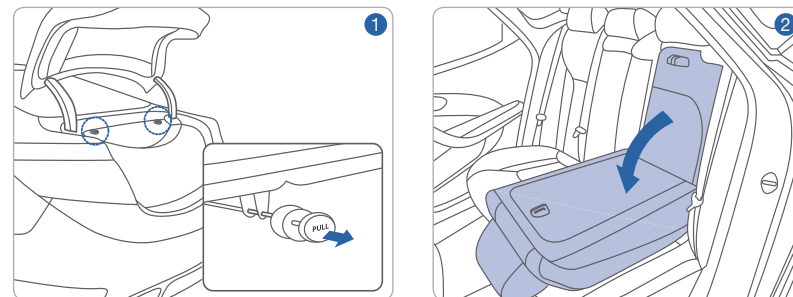 


STEERING WHEEL ADJUSTMENTS

  Manual Tilt

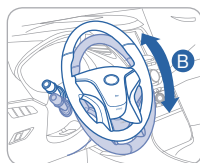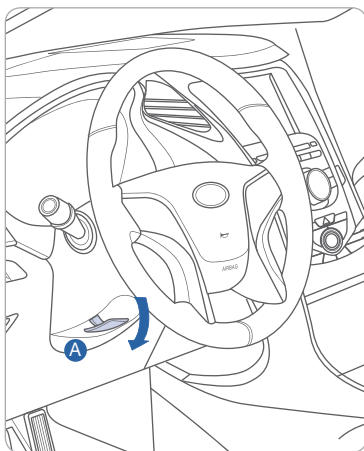

Tilt


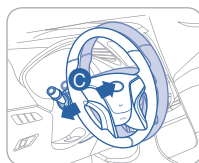 


Telescopic


Do not adjust while driving.

1. Pull the lever **A** down to release.
2. Set the angle **B** and distance **C**.
3. Pull the lever **A** up to lock.

  Power Tilt and Telescopic

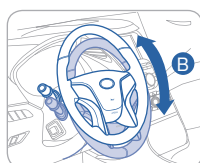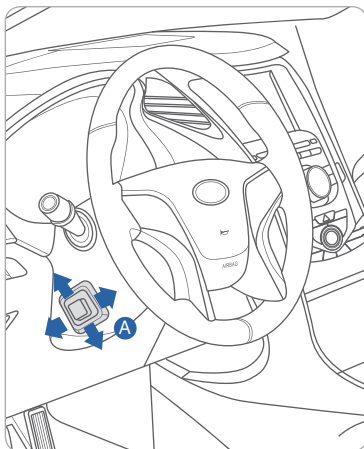

Tilt

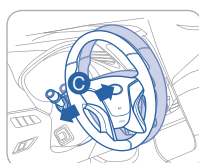 


Telescopic

NOTE: Do not adjust while driving.

Set the angle **B** and distance **C** with the switch **A**.

 DRIVER'S MAIN CONTROLS

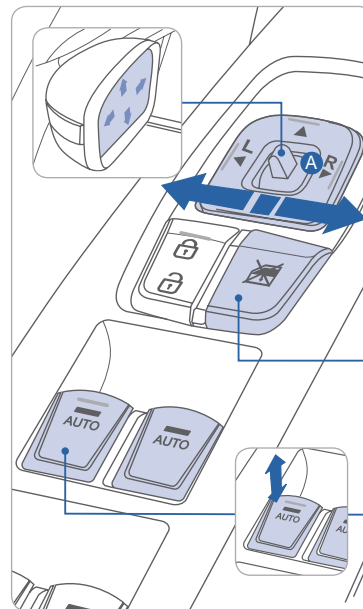

Outside Rearview Mirrors

Move the selecting switch **A** to the right or left.

Press the appropriate direction (**←** **→**) on the switch.

Middle position

Lock the control.



Power Window Lock Switch

 
Disables the power window switches on the passenger doors.

Window Auto down/up

Press past detent to fully open/close window.



CENTRAL DOOR LOCK SWITCH

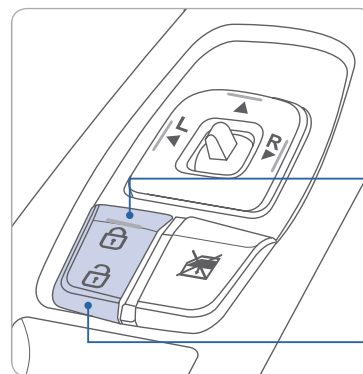


All doors will lock.

All doors will unlock.



FEATURES AND CONTROLS

 HEAD LIGHTS AND FOG LIGHTS

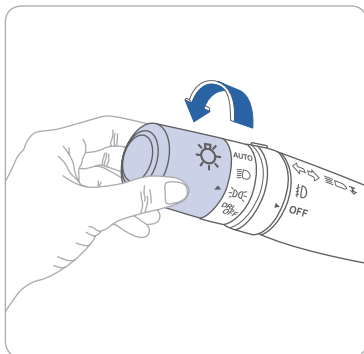


- ▶ **AUTO** Auto light
- ▶ **Head light**
- ▶ **Parking light**
- ▶ **DRL OFF** OFF


Escort Function

Head lights will stay on for approximately 30 seconds after exiting and locking vehicle. Press the remote lock button twice to turn the head light off. See the Owner's Manual for more detail.

 
Turn signals and lane change signals

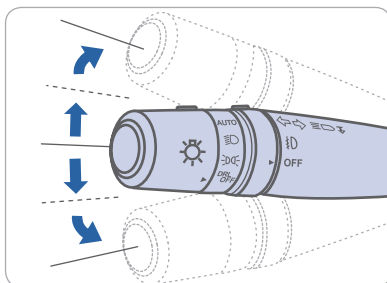


Flashing head lights

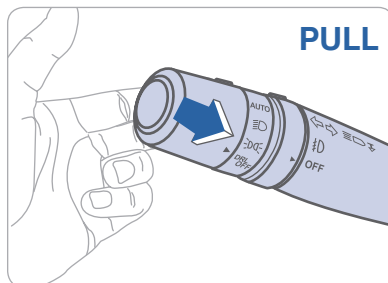 

High beam

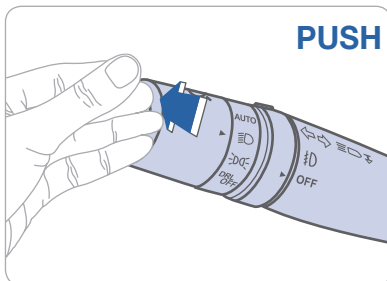 


Fog light

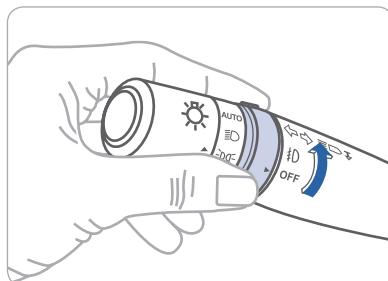 


WIPER AND WASHER

 Front Wiper and Washer

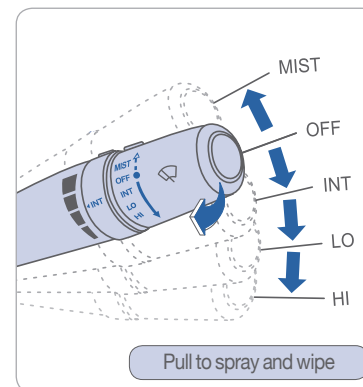


- MIST** - Single wipe
- OFF** - Off
- INT** - Intermittent wipe
- LO** - Normal wiper speed
- HI** - Fast wiper speed

 Front Intermittent wipe time adjustment

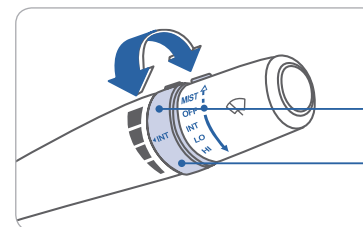

- Fast wiper speed
- Slow wiper speed

 Wash with brief wipes


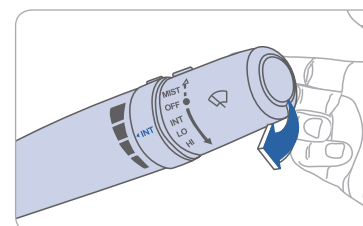




FEATURES AND CONTROLS

SUNROOF

  
Sliding the sunroof

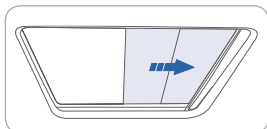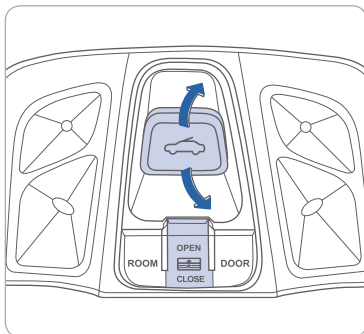

To Open

Press switch rearward.

 Press switch rearward past the detent to open completely.

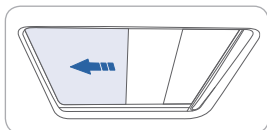

To Close

 
Press switch forward past the detent to close completely.



NOTE

To slide the sunshade, press open or close button.

Tilting the sunroof

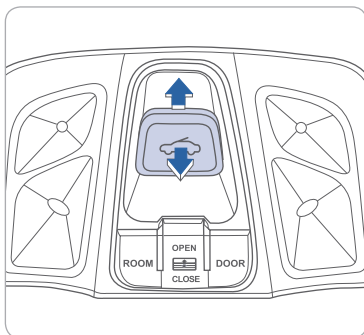


To Tilt

Press the switch up.


To close

 Push the switch forward or pull the switch down.

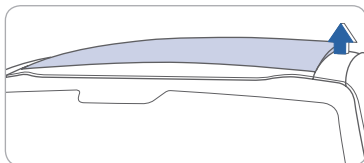

INTERIOR LIGHTS

 Map lamp

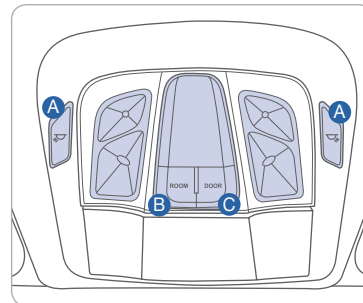

Push the switch **A** to turn the map lamp on or off.

 
ROOM **B**

Map lamp and room lamp will turn on.

DOOR **C**

Map lamp and room lamp will turn on when any door is open except trunk.

HOMELINK WIRELESS CONTROL SYSTEM

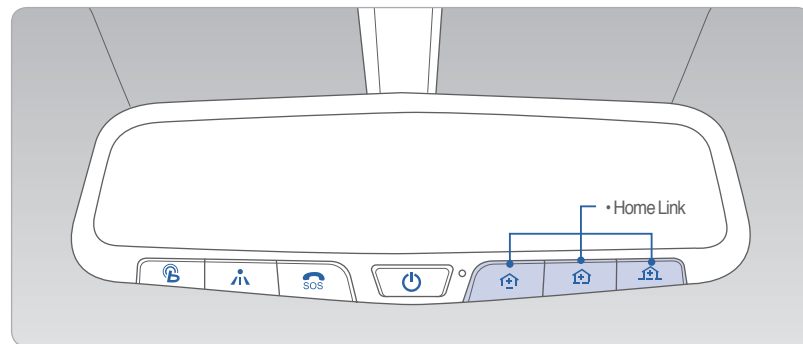

Programming Rolling Code Garage

Press and hold your selected HomeLink button for 20 seconds. Release when light flashes rapidly.

Press and release the "learn" or "smart" button on the garage door opener motor-head unit.

 
NOTE: 30 second window to initiate next step

Press and hold the desired HomeLink button for 2 seconds and release. Repeat this sequence up to 3 times. If programming is successful, the garage door should open or close during this step.

For detail instructions including "Standard type" garage door, refer to your Owner's Manual or visit www.homelink.com





FEATURES AND CONTROLS

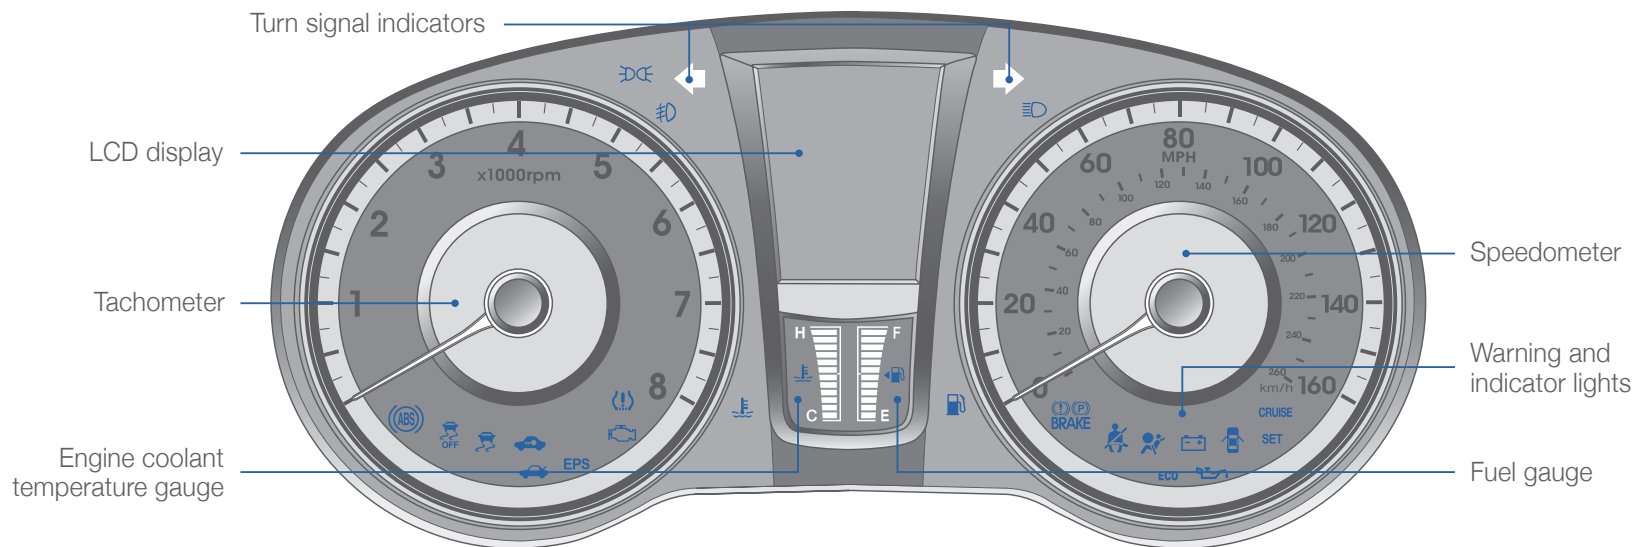

WARNINGS AND INDICATORS


Air bag warning light	Parking brake & Brake fluid warning light	ABS warning light
Seat belt warning light	Low Tire Pressure Indicator / TPMS (Tire Pressure Monitoring System) malfunction indicator	
High beam indicator	Engine oil pressure warning light	Charging system warning light
Electronic Power Steering system warning light	Door open warning light	Turn signal indicator
Immobilizer indicator	Shift pattern indicator	Low beam indicator
Trunk open warning light	Low fuel level warning light	ESC (Electronic Stability Control) indicator
ESC (Electronic Stability Control) OFF indicator	CRUISE Cruise indicator	SET Cruise SET indicator
Malfunction indicator light	Front fog light indicator	ECO Active ECO indicator
Light on indicator	Engine coolant temperature warning light	

  INSTRUMENT PANEL ILLUMINATION

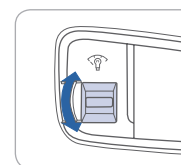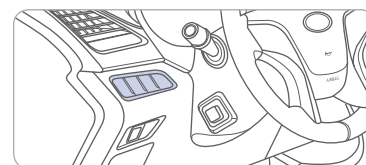


Push the control switch up or down to adjust the brightness

 TRIP COMPUTER

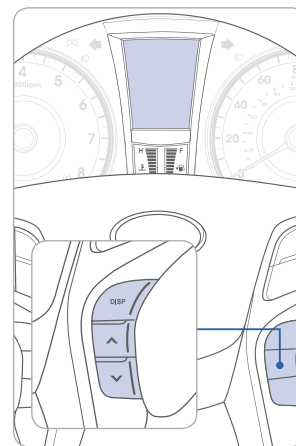

Press the DISP button to switch between Vehicle Settings and Trip Computer.

 Press the ^ or v button to select functions as shown below.

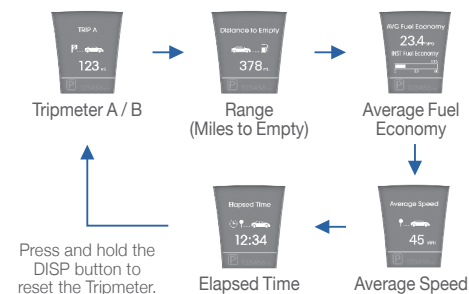


Press and hold the DISP button to reset the Tripmeter.




FEATURES AND CONTROLS

 CLIMATE CONTROL

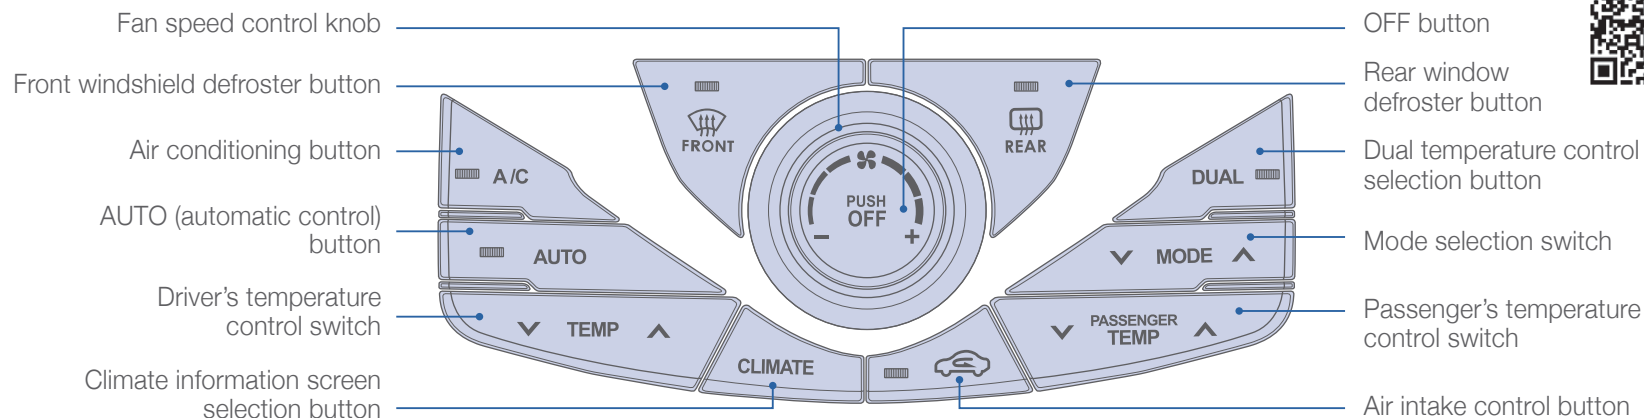


AUTOMATIC HEATING AND COOLING

 

1. Press the AUTO button.
2. Press the temperature button to the desired setting.

The modes, fan speeds, air intake and air-conditioning will be controlled automatically according to the temperature setting.

 MODE SELECTION

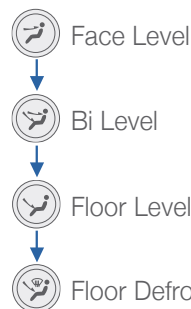


AIR INTAKE CONTROL



This is used to select outside (fresh) air position or recirculated air position.




- Outside (fresh) air position
- Recirculated air position

 REAR WINDOW DEFROSTER

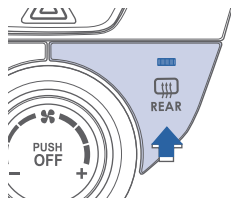

Press to activate / deactivate the rear defroster.

   DEFROSTING / DEFOGGING

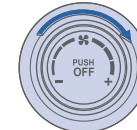


1. Press the front windshield defrost control.
2. Set the temperature control to the warmest setting.
3. Set the fan speed to the highest setting.

NOTE

To reduce the tendency of the glass fogging and improve visibility, keep the interior surface of the windshield clean by wiping it with a clean cloth and glass cleaner.

 DUAL BUTTON

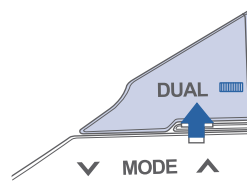



Press the DUAL button to operate the driver and passenger side temperature individually.



FEATURES AND CONTROLS

STEERING WHEEL CONTROLS

  Cruise control system

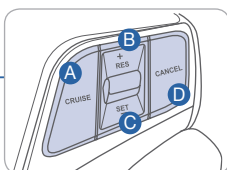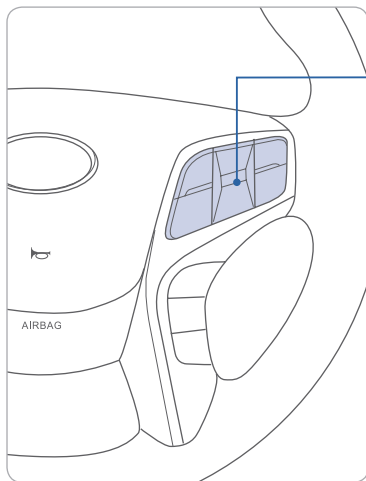

To set a cruising speed

1. Press CRUISE button **A** and the CRUISE indicator will illuminate in the instrument cluster.
2. Accelerate to desired cruising speed (above 25 mph). Press SET- button **C** and remove your foot from the accelerator pedal.

To accelerate or decelerate

 
 
Press RES + button **B** up to increase set cruising speed.

Press SET - button **C** down to decrease set cruising speed.

To cancel cruising speed

Press CANCEL button **D** or depress brake pedal, or press ON/OFF button **A**.

Audio control

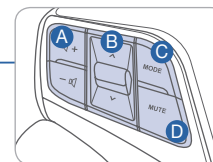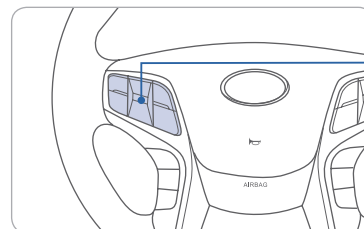

A VOLUME

Raise or lower speaker volume.

B SEEK / PRESET

Press to change presets.

Press and hold to seek stations.

C MODE

 
 
Change the audio source.

Hold to turn Audio power ON/OFF.

D MUTE

Mute the sound.

Bluetooth control

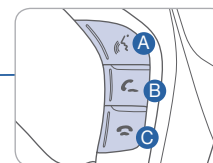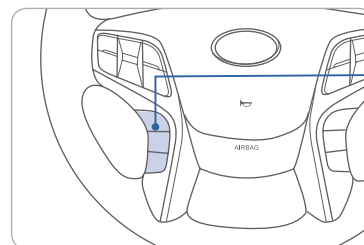

A TALK

Activate voice recognition.

B CALL

Place and transfer call.

C END

End call or cancel function.

If experiencing difficulty using Voice Recognition to place a call, be sure you are using the actual full contact name as entered in your phone book, not a casual or nick-name (e.g., if name was entered as "Robert Smith", say "Call Robert Smith", not "Call "Bob Smith").

 


BLUETOOTH OPERATIONAL TIPS

In the following situations you or the other party may have difficulty hearing each other:

1. Keep the Bluetooth volume to a low level. High level volume may result in distortion and echo.
2. When driving on a rough road, high speeds and/or with the window open.
3. When the air conditioning vents are facing the microphone and/or when the air conditioning fan is at the max speed.

Steering wheel bluetooth control

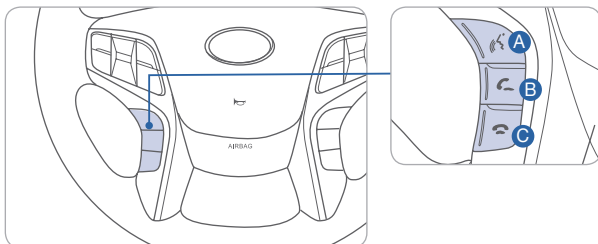

A TALK

Activate voice recognition.

B CALL

Place and transfer call.

C END

End call or cancel function.

To Answer a Call:

- Press  button on the steering wheel.

To Reject a Call:


- Press  button on the steering wheel.

To Adjust Ring Volume:

- Use the VOLUME buttons on the steering wheel.

To Transfer a Call to the Phone

(Secret Call):

- Press and hold  button on the steering wheel until the audio system transfers a call to the phone.


To Finish a Call:

- Press  button on the steering wheel.


Making a call using voice recognition:

The menu tree identifies available voice recognition Bluetooth® functions.

Calling by Name:

1. Press  button.
2. Say the following command:
 - “Call <John>”: Connects the call to John.
 - “Call <John> on <Mobile/Home/Office>”: Connects the call to John’s Mobile, Home, or Office phone number.

Dialing by Number:

1. Press  button.
2. Say “Call”.
3. Say “By number” when prompted.
4. Say desired phone numbers.
5. Say “Dial” to complete the number and make a call.

For complete list of commands, refer to your Owner’s Manual.

VOICE RECOGNITION TIPS

Your vehicle is equipped with Voice Recognition technology which allows drivers to operate their phones without having to take their eyes off the road to minimize distractions.

Voice recognition performance may be affected if driving with windows and sun roof open; when the heating-cooling system is on; when passing in a tunnel or when driving on rugged and uneven roads.

Quick reference on using voice commands

To start voice command. Press the  key, the following commands are available:

Command	Function
More Help	Provides guidance on commands that can be used anywhere in the system
Help	Provides guidance on commands that can be used within the current mode.
Calls <Name>	Calls <Name> saved in Contacts. Ex) Call “John”
Dial <Number>	Call can be made by dialing the spoken numbers. Ex) Call “123”
Phone	Provides guidance on Phone related commands. After saying this command, say “Call History”, “Contacts” to execute corresponding functions.
Call History	Displays the Call History screen.
Contacts (Call by Name)	Displays the Contacts screen. After saying this command, say the name of a contact saved in the Contacts to automatically connect the cell.
Dial Number	Display the Dial number screen. After saying this command, you can say the number what you want to call.



MULTIMEDIA

BLUETOOTH PHONE PAIRING

 
 
Pairing tutorials, phone compatibility and Operational tips can be found through the Smart QR code using the QR reader application on your Smartphone.




Phone setup (pairing phone)

NOTE: Vehicle must be parked to complete pairing process.


1. Press PHONE button or on the steering wheel remote control.

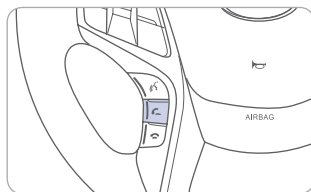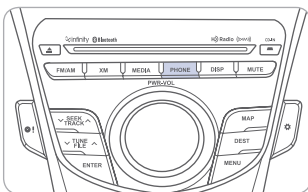

 
2. Touch the Settings button.

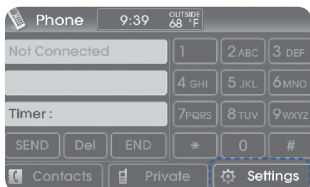

 3. Touch the Pairings button.

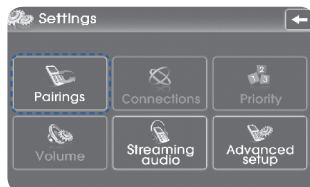

 4. Select Add to button to pair a new mobile phone.

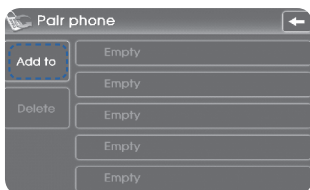

5. Enable Bluetooth® on your phone. Select "AZERA" from the Bluetooth® device list on your mobile phone and input the passkey displayed on the screen continue pairing.

 


6. After pairing is completed, transfer of the contract list to the audio system will begin (if your phone is supported).

Please visit www.hyundaiusa.com/Bluetooth for a list of compatible phones tested to work with Hyundai's Bluetooth® system.



BLUE LINK TELEMATICS SYSTEM

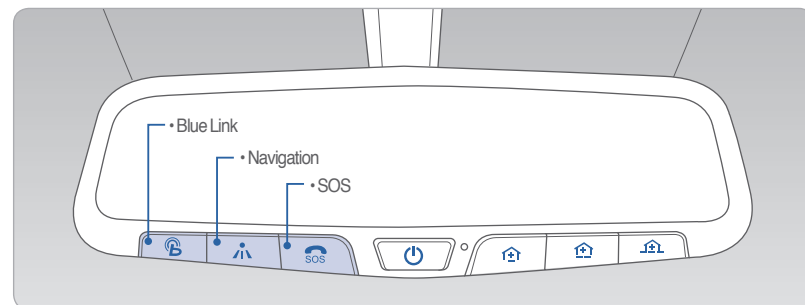

Press the button for access to the voice-response menu of services. You have two options:

- You can say, "Main Menu" for a listing of main menu choices.
- You can directly select any of the listed menu items by saying its name.

Navigation	Information	Essentials	Vehicle Assist
New Destination Gas Prices Restaurant Rains Route Assistance Daily Route Guide Main Menu	Traffic Weather Valet Alert Main Menu	Voice Texting Location Sharing Main Menu	Roadside Assistance Agent Assistance Service Link Quick Tips Main Menu

- Press the button for navigation-related services.
- Press the button for SOS Emergency Assistance.
- Refer to your Blue Link User's Manual for detailed information on system operation.
- For immediate assistance with subscription services, please call 1-855-2BLUELINK (1-855-2225-8354).



MULTIMEDIA

Remote Door Unlock/Lock

Blue Link Mobile App



You can download the Blue Link mobile app to your compatible smart phone from the following sites:

- iPhone® — Apple® App Store
- Android® — Google Play
- BlackBerry® — BlackBerry® App World

 
With this feature, you can lock or unlock your vehicle doors from virtually anywhere by using the Blue Link mobile phone app, by dialing the toll-free number, or by using the Blue Link owner's website.

- To use this feature, you must have a Blue Link Personal Identification Number (PIN). To create or change your PIN, log on to www.MyHyundai.com.

To Activate Remote Door Unlock/Lock

- By Blue Link Mobile App: Select DOOR UNLOCK or DOOR LOCK, as desired.
 - Enter your Blue Link PIN.
 - The command to lock or unlock your doors will be sent to your vehicle.
- By phone: Dial toll-free 1-855-2-BLUELINK (1-855-225-8354).
- By web site: Log on to www.MyHyundai.com, select Blue Link.
 - Select Remote Services, then Remote Door Unlock/Lock.
 - Input your Blue Link PIN. (If you need time to get to your vehicle, specify a time delay before your vehicle will be unlocked.)

TOUCH SCREEN AUDIO

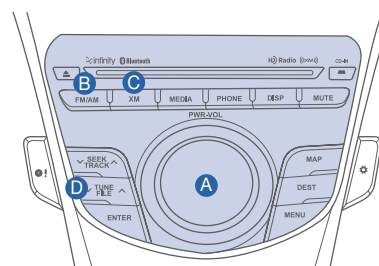

Press POWER button **A** to turn radio on.

- TUNING/LISTENING TO CHANNELS
 1. Press FM/AM **B** or XM® **C**.
 2. Press TUNE **D** switch to desired channel.

NOTE

A clear view of the southern sky is recommended to ensure XM® radio reception.

- SETTING PRESET BUTTONS
Six preset frequencies each for FM1/FM2/AM/XM modes can be stored manually.

1. Select the band (FM1, FM2, AM, and XM) you want to store a station into.
2. Select the desired station.
3. Touch and hold one of the preset buttons until audible beep is heard.

 
- ADJUSTING THE SOUND

1. Touch the SOUND button on the main screen.
2. Touch the arrows on screen to adjust desired sound setting.



NOTE

HD Radio is default OFF. Use setup → Main to change setting.

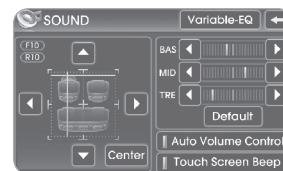

Please refer to your Navigation Manual for more detailed information on how to use your audio system.

Complimentary XM® subscription ends three months following the vehicle date of sale.

 
Please contact XM® Radio at 1-800-XM-RADIO (1-800-967-2346) to renew your XM® subscription.



MULTIMEDIA

NAVIGATION

Map position

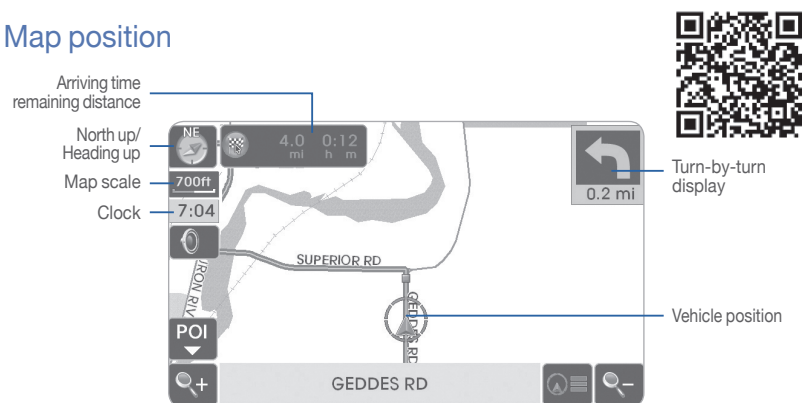

North UP/Heading up.

 
- Displays the current map mode to reflect the position in reference to the screen. The map mode can be switched between North Up and Heading Up.
- Each time the button is pressed, the screen will switch in the order shown below.
 - Heading Up → North Up → Heading Up →
 - Map Scale: Increases or decreases the map size.
 - Map Scale indicator: shows the scale of the map.
 - Map Voice Key: Activate/deactivate the voice guidance.

Destination menu



- Address: Finds a destination by setting an address.
- Previous Destinations: Destination you have previously entered.
- POI (Point of Interest) Search: Search for a destination category or name.
- Emergency: Finds a destination by searching for a police station, hospital or Hyundai dealership.

AUX, USB, AND iPod® PORT

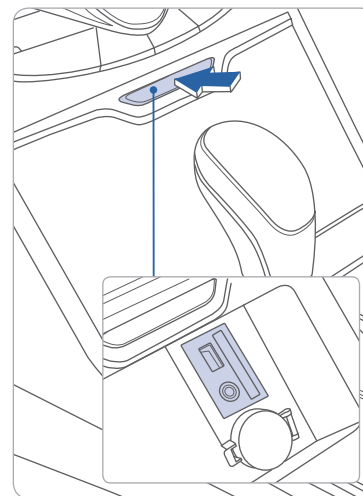

Use the jack to connect an external audio device and listen to it through the audio system in your vehicle.

NOTE

To operate your iPod® through the vehicle's audio system, a Hyundai adapter cable is required. This cable can only be purchased at your local Hyundai dealer.

iPod® is a trademark of Apple Inc.

CLOCK ADJUSTMENT



 
Time Setup

1. Press and hold **CLOCK** **A**.
2. Touch ▲ or ▼ to set the clock.
3. Touch "Done" when finished.




FEATURES AND CONTROLS

AUTOMATIC TRANSMISSION

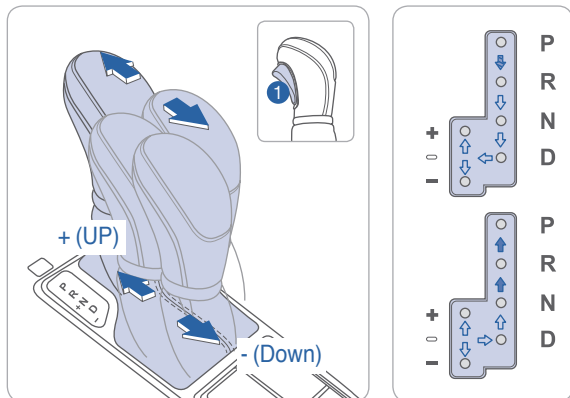

 - (➡) : Depress the brake pedal and the lock release button ① when shifting.
- (➡) : The lock release button ① must be pressed while moving the shift lever.
- (➡) : The shift lever can be shifted without pressing the lock release button ①.

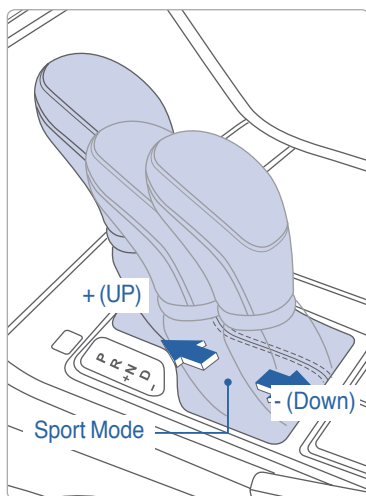


Sport mode



Move the shift lever from D (Drive) to the left gate to select.

Move the shift lever forward (+) to upshift or rearward (-) to downshift.

 TIRE PRESSURE MONITORING SYSTEM (TPMS)

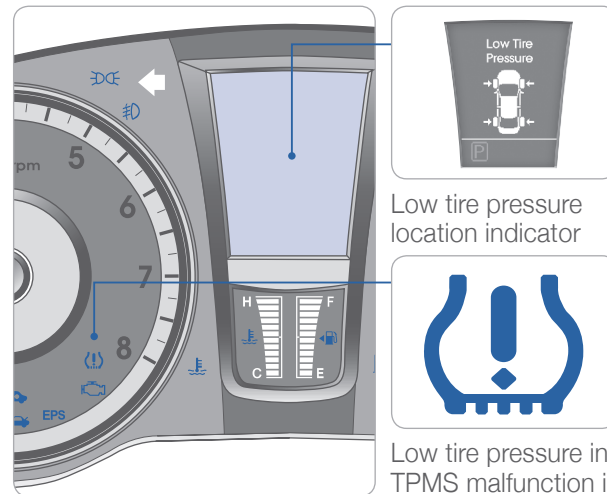

Low Tire Pressure Indicator

Illuminates if one or more of your tires is significantly under-inflated.

Low Tire Pressure location indicator

Indicates which tire is significantly under-inflated by illuminating the corresponding position.

 
TPMS Malfunction Indicator

Blinks for approximately one minute then remains illuminated when there is a malfunction with the TPMS system. Have the system checked by an authorized Hyundai dealer.



FEATURES AND CONTROLS


ELECTRONIC STABILITY CONTROL (ESC)

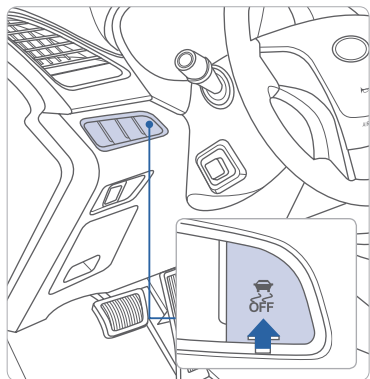

The ESC system is an electronic system designed to help the driver maintain vehicle control under adverse conditions.

Press to turn ESC on or off.

 ACTIVE ECO SYSTEM

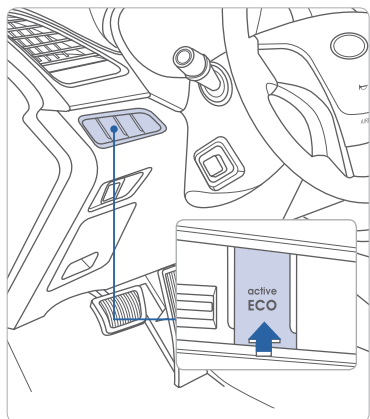

Active ECO System helps improve fuel efficiency by revising the engine and transmission calibration.

Active ECO on – For optimal fuel efficiency

Active ECO off – For optimal performance and drivability.

 
To improve your fuel efficiency:

- Accelerate at a moderate rate
- Keep tires inflated to the recommended pressure on the placard
- Be sure the wheels are properly aligned
- Avoid unnecessary braking
- Drive between 55-65 mph on the freeway



CHILD-PROTECTOR REAR DOOR LOCK

Allows or prevents opening the rear door from inside of the vehicle.

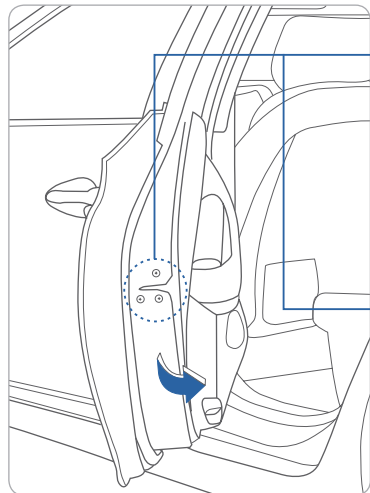

Lock (🔒)

Insert a key into the hole and turn it to the lock (🔒) position.

 
 


Unlock

Insert a key into the hole and turn it counterclockwise to the unlock position.



REARVIEW CAMERA

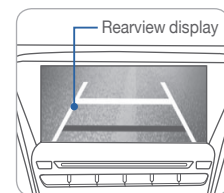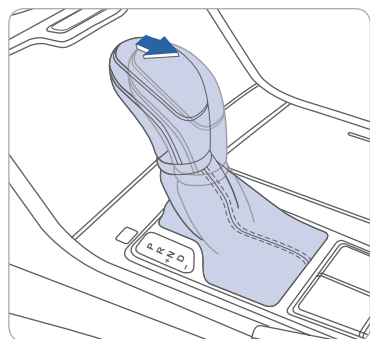

The rearview camera will activate when the ignition switch is ON and the shift lever is in the R (Reverse) position.

Key Websites

Hyundai website - www.hyundai.com

Hyundai owner website - www.myhyundai.com

Bluetooth phone compatibility - www.hyundaiusa.com/bluetooth

Blue Link - www.hyundaiusa.com/technology/bluelink

AZERA CUSTOMER DELIVERY CHECK LIST

HYUNDAI OWNER	DEALERSHIP NAME
SALES CONSULTANT	DATE
VIN	PREVIOUS VEHICLE

BEFORE DELIVERY

- ☐ CONFIRM “GOOD BATTERY” USING GR8 AND STAPLE TEST TICKET HERE
- ☐ CONFIRM COLD TIRE PRESSURE IS SET TO PLACARD
- ☐ CONFIRM SHIPPING FUSE IS IN POSITION
- ☐ VERIFY VEHICLE IS CLEAN, IN GOOD CONDITION, FREE OF CHIPS AND SCRATCHES - CLEAN WINDSHIELD AND BACK WINDOW
- ☐ ENSURE FLOORMATS ARE SNAPPED INTO PLACE (if applicable)

WALK THE CUSTOMER THROUGH EACH OF THE FOLLOWING KEY DELIVERY FEATURES

- ☐ Defrost - page 15

- 1 Press the front defrost button.
- 2 Set to warmest temperature setting.
- 3 Set to highest fan speed.

